

Alienware Tri-Mode Wireless Gaming Keyboard - AW920K

User's Guide

Keyboard Model: AW920K
Regulatory Model: AW920K/UD2402c

A L I E N W A R E™ 



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.




WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Contents

What's in the box	4
Features	5
Setting up your gaming keyboard	7
Turning on your AW920K gaming keyboard	7
Wired Connection Mode	7
2.4G Wireless Connection Mode	8
Bluetooth Wireless Connection Mode	9
Using your gaming keyboard	11
Charging your gaming keyboard	12
Option 1: Charging through dongle extender with magnetic snap charging	12
Option 2: Charging through USB cable	13
Charging your gaming keyboard	14
Low battery	14
Alienware Command Center	15
Installing AWCC through Windows Update	15
Installing AWCC from the Dell Support website	15
Keyboard basic color function	17
Configuring Dial knob and Rocker switch functions	20
Updating firmware and restoring factory defaults	22
Additional Features in AWCC 6.3 and Later version	24
Save Preset	25
Disabling the modified keys temporarily	26
Specifications	27
Troubleshooting	28
Charging power requirement	29
Statutory information	33


What's in the box

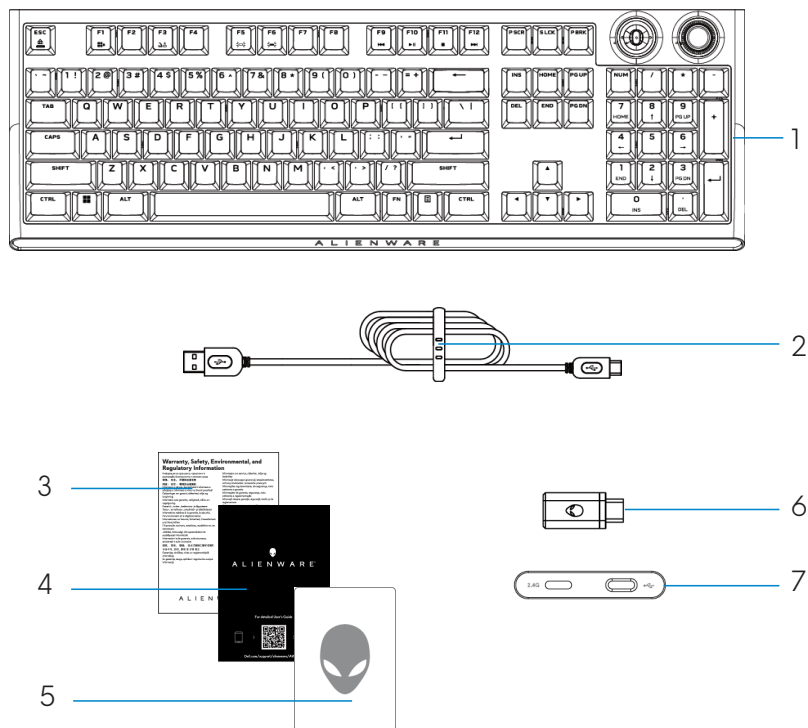

1. Alienware Tri-Mode Wireless Gaming Keyboard - AW920K
2. USB-A to USB-C cable
3. Regulatory document
4. Quick Start Guide
5. Alienware sticker
6. Dongle
7. Dongle Extender with magnetic snap charging

 **NOTE:** The documents shipped with your keyboard may vary depending on the region.

Features

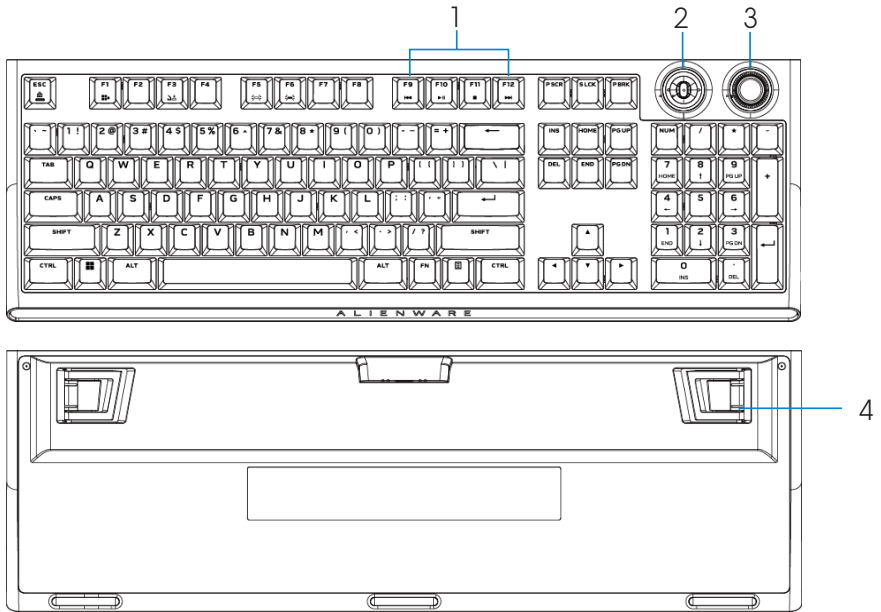

Callout Features

Description

1	Multimedia key	Enables you to forward, play, stop, or backward the movie and music.
2	Multi-functional rocker	Default: Media control - Push Left: Previous track - Push Right: Next track - Push down: Play or Pause track
NOTE: Customizable in Alienware Command Center (AWCC).		
3	Multi-functional dial knob	Default: System volume control - Clockwise: Increase volume - Counterclockwise: Decrease volume - Push down: Mute or Unmute
NOTE: Customizable in Alienware Command Center (AWCC).		
4	Three-angle adjustable feet	Enables you to adjust the keyboard feet tilts in three different angles

AW920K is Alienware's first ever Tri-Mode Wireless Gaming Keyboard that offers versatile connection options across a large number of gaming devices.

You can enjoy an undisturbed game playing with magnetic snap charging technology.

The new programmable rocker switch and dial knob enables you to perform quick adjustments to control media while keeping you concentrated on the game.


The key features of AW920K include:

- Tri-Mode connections: Wireless 2.4 GHz, Bluetooth 5.1, and Wired USB
- Full-sized layout
- Cherry MX red switches
- Programmable multi-functional dial knob and rocker
- Polybutylene Terephthalate (PBT) double-shot keycaps
- Fully programmable keys with anti-ghosting and N-key rollover capability
- Dongle extender with magnetic snap charging
- AlienFX per-key RGB backlighting
- Detachable paracord cable

Setting up your gaming keyboard


Turning on your AW920K gaming keyboard

Slide the power button on the keyboard as shown in the following image to turn on the keyboard.

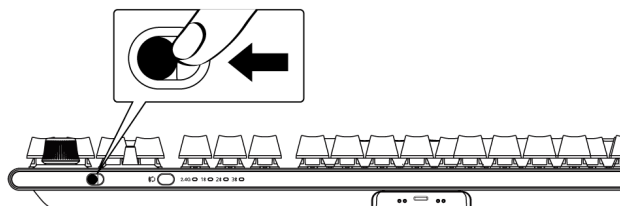


Wired Connection Mode

Connect the USB-C side of the cable to your gaming keyboard and connect the USB-A side of the cable to the USB port on your computer.

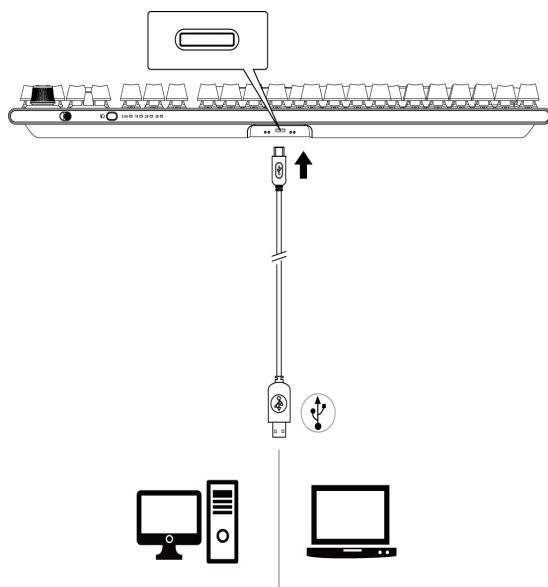


2.4G Wireless Connection Mode


1. Connect the AW920K dongle to your computer or to the dongle extender with magnetic snap charging.

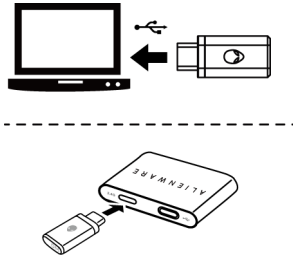


2. Connect the USB-C side of the cable to the dongle extender with magnetic snap charging and USB-A side of the cable to your computer.

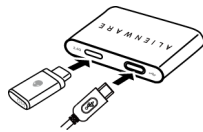


3. Press the connection mode button to switch to 2.4G wireless mode.

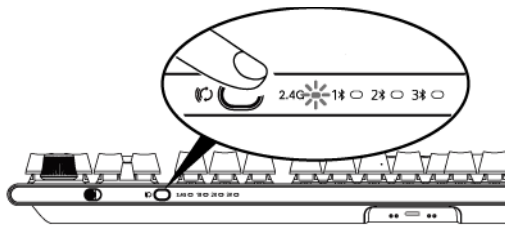

4. Place the dongle extender with magnetic snap charging close to your AW920K for easy access.

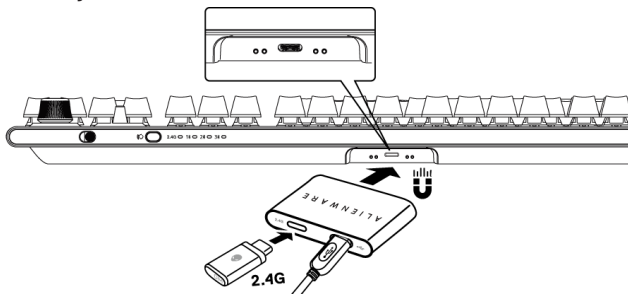


- When the battery is low, slide the dongle extender with magnetic snap charging closer to your AW920K and it will magnetically attract and start charging.

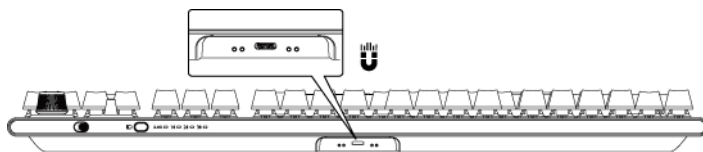


Bluetooth Wireless Connection Mode

- Press the connection mode button to switch from 2.4G to Bluetooth 1(1✳).

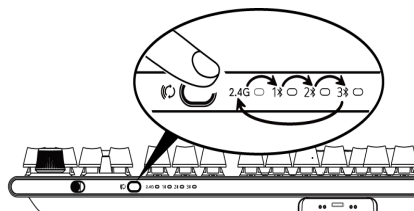


- Press and hold the connection mode selection button for three seconds to activate Bluetooth pairing.
- Check your computer to view the new Bluetooth device. Click the notification and enter the PIN to connect the new Bluetooth device.
- To connect to a different computer, you can switch between Bluetooth 1 (1✳), Bluetooth 2 (2✳) or Bluetooth 3 (3✳) and repeat above steps for new connection.

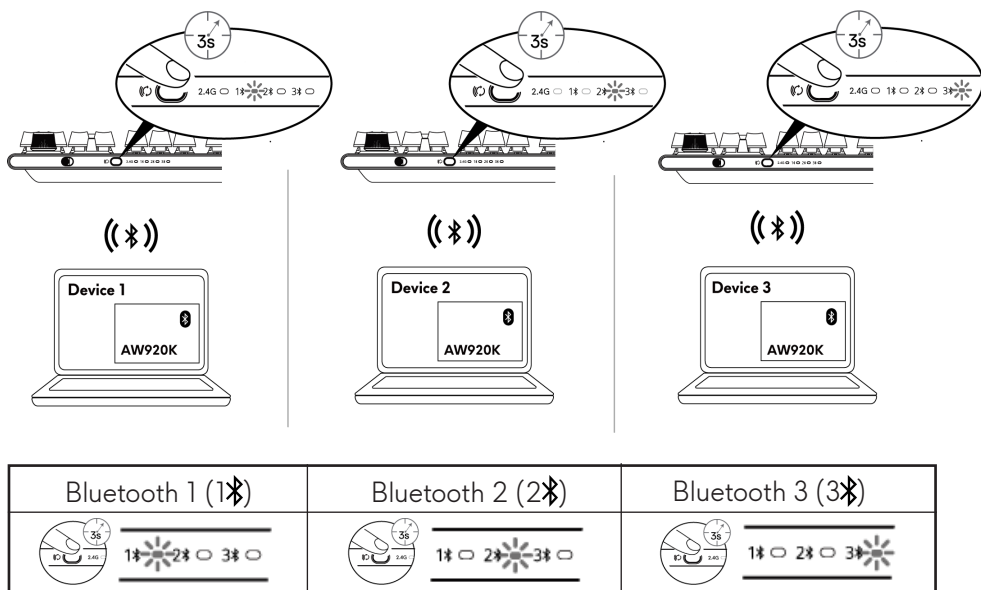

NOTE: You can use your gaming keyboard even without installing the Alienware Command Center (AWCC).

Using your gaming keyboard

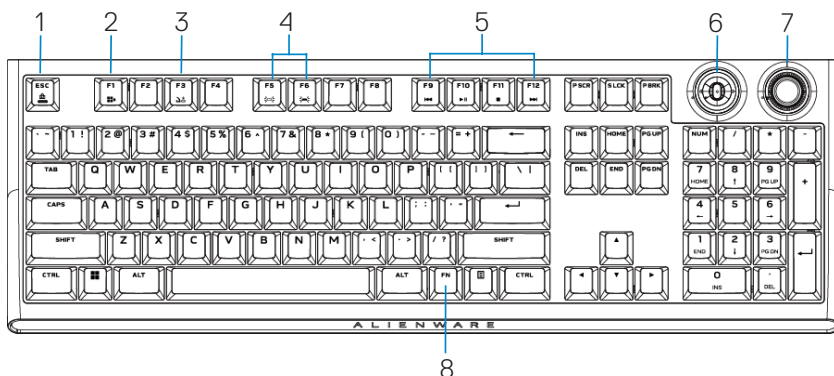


Callout	Function	Function keys	Keyboard behavior
1	FN Lock	Press + to toggle	Locks the F1 to F12 media-control functions
2	Win Lock	Press + (FN+F1)	Disables the Windows key function
3	Profile switch	Press + (FN+F3) (press once to cycle)	Switches between profiles (profile+lighting) stored in keyboard
4	Brightness control	- Press + (FN+F5) - Press + (FN+F6)	Decreases brightness Increases brightness
NOTE: AW920K has a total of 10 brightness levels and default brightness level is 5. For AWCC 6.6 and above users, the maximum default brightness level is 7. For keyboard function key brightness control above level 7, user to set maximum brightness in AWCC first.			
5	Media playback	- Press + (FN+F9) - Press + (FN+F10) - Press + (FN+F11) - Press + (FN+F12)	Fast backward Play/Pause Stop Fast forward
6	Rocker	- Push left - Push right - Press down	Previous track (default) Next track (default) Play/Pause (default)
NOTE: You can remap the function through AWCC.			
7	Dial knob	- Clockwise - Counter clockwise - Press down	Increase volume Decrease volume Mute/Unmute
8	FN toggle	Press + ~	Toggles different FN functions from F1 to F12

Charging your gaming keyboard

European Union (EU) has a common charger requirement for wireless products that have embedded rechargeable battery. For more information about the EU charging power requirements, see [Charging power requirement](#).


Option 1: Charging through dongle extender with magnetic snap charging

1. Connect the USB-C side of the cable to the dongle extender with magnetic snap charging and USB-A side of the cable to your computer.
2. Place the dongle extender with magnetic snap charging close to your AW920K for easy access.

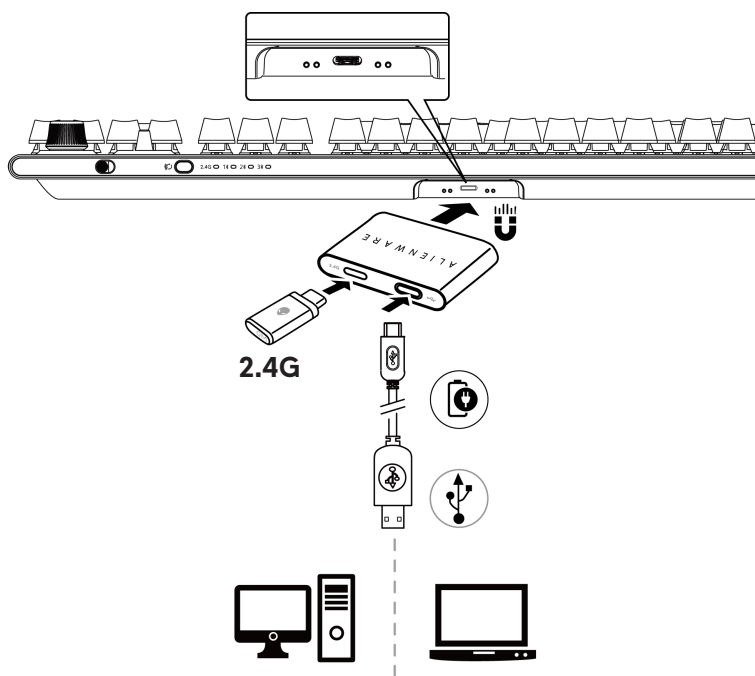


Option 2: Charging through USB cable

Connect the USB-C side of the cable to your gaming keyboard and connect the USB-A side of the cable to the USB port on your computer.

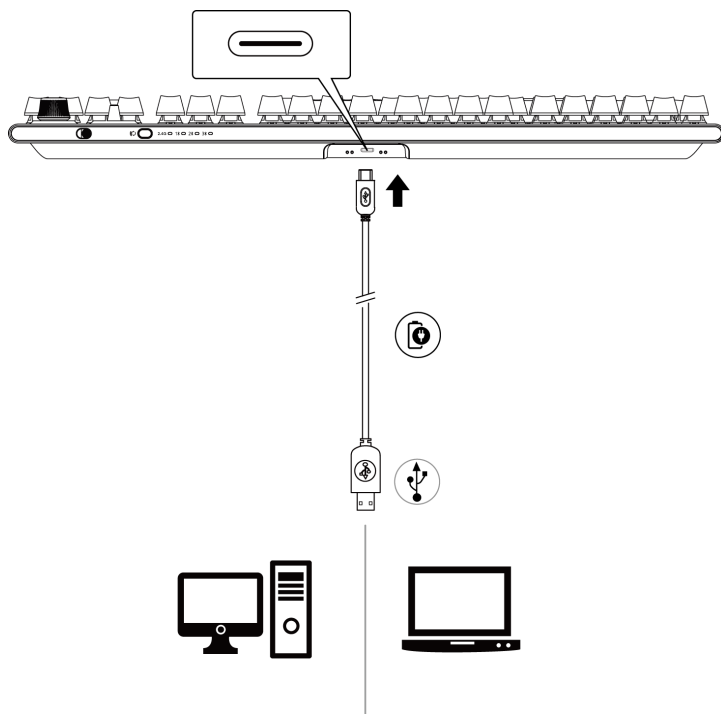

Low battery

When the battery of AW920K is lower than 15%, the rocker and dial knob blinks in amber color. It is highly recommended to charge your keyboard immediately.

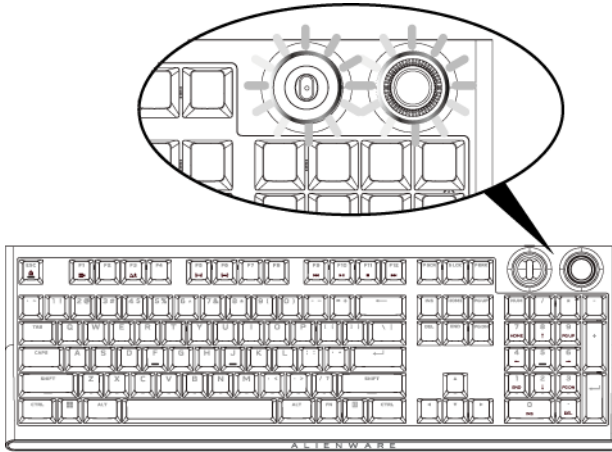

NOTE: Under low battery status, the dial knob and rocker blinks in amber color for five seconds and rest for 20 seconds in periodic cycle.

Alienware Command Center

Installing AWCC through Windows Update

1. Navigate to the program folder to ensure that the AWCC installation is complete.
2. Launch AWCC and perform the following steps to download the additional software components:
 - In the **Settings** window, click **Windows Update**, and then click **Check for updates** to check the Alienware driver update progress.
 - If the driver update is not responding in your computer, install AWCC from the Dell Support website.

Installing AWCC from the Dell Support website

There are two versions of AWCC: 5.X and 6.X. AWCC 6.X is available for Alienware computers launched from the year of 2022 onward and third-party systems while AWCC 5.X is for all other computers



1. Download the latest version of the following applications at <https://www.dell.com/support/home/en-us?app=drivers>
2. Navigate to the folder where you saved the setup files.
3. Double-click the setup file and follow the on-screen instructions to install the application.

AWCC 5.5 FX system screen



AWCC 6.X system screen



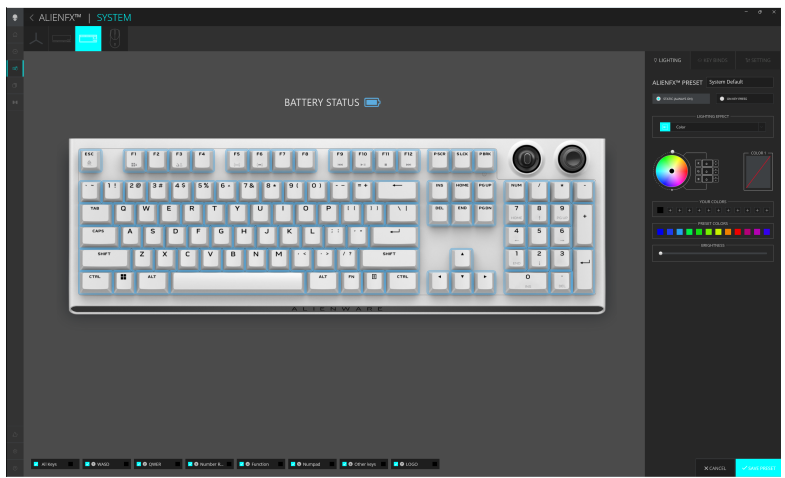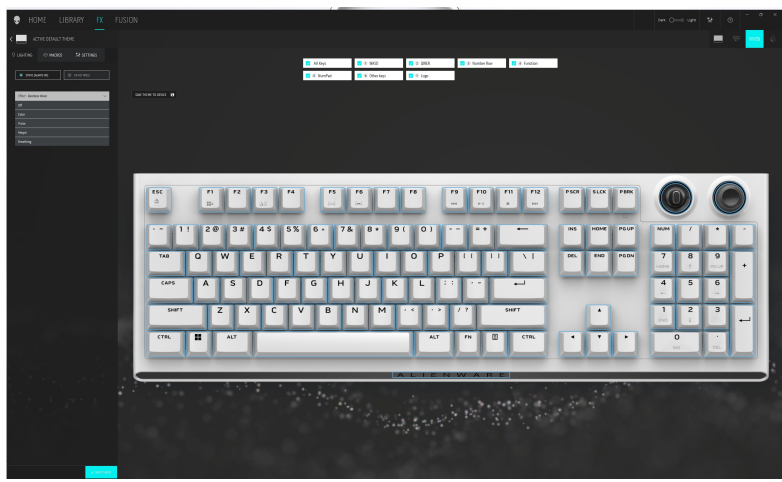


Keyboard basic color function

1. Launch **Alienware Command Center** application from the **Start** menu.
2. Select **FX**. In the **ACTIVE DEFAULT THEME** section, select **EDIT > LIGHTING**.
3. Select **Effect** from the drop-down list.
4. Define the effect of the keyboard LEDs.
5. Adjust the brightness.

Setting up lighting effect in AWCC 5.5




Setting up lighting effect in AWCC 6.0

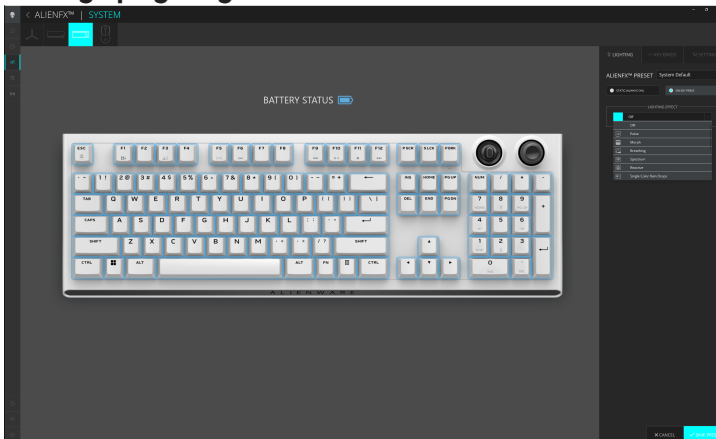


1. Select **Effect** from the drop-down list for **STATIC (ALWAYS ON)** or **ON KEY PRESS** modes.
2. For **STATIC (ALWAYS ON)**, select the section of the keys or all sections that you want to apply the animation above the keyboard image.
3. From the menu of supported animations, select one of the following: **Off, Color, Pulse, Morph, Breathing, Spectrum, Single Color Wave, Rainbow Wave, Scanner, and Static Default Blue.**
4. For Color animation, define the color of the keyboard animation effect by:
 - Choose color using the color wheel bubble or enter the RGB value of the desired color or select from the **PRESET COLORS**.

- Adjust the brightness.
- Adjust the tempo of the animation effect.

Additional settings for some lighting effect in AWCC 5.5

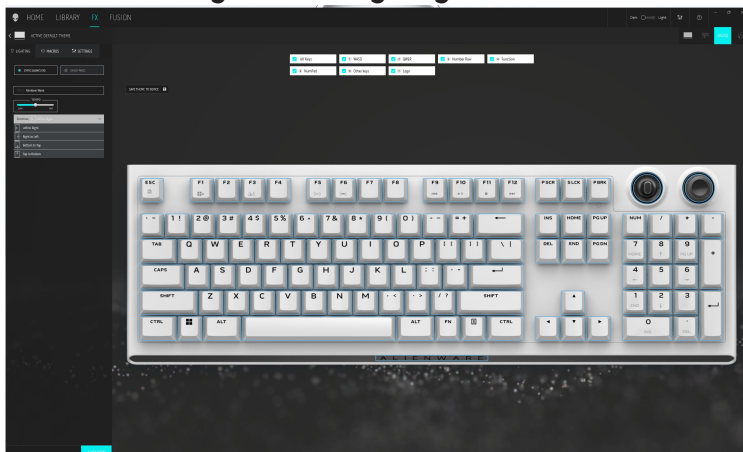

Additional settings for some lighting effect in AWCC 6.0

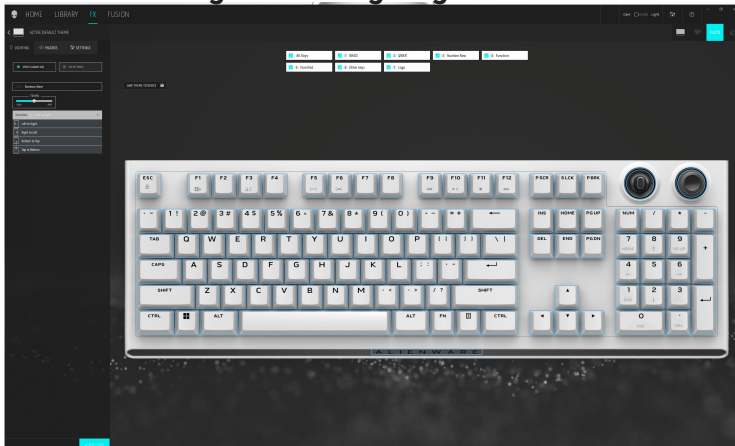

5. For **Rainbow Wave** animation, you can select the direction of the lighting effect and the tempo: **Left to Right, Right to Left, Bottom to Top, Top to Bottom**.
6. For **ON KEY PRESS** mode, from the menu of supported animations select one of the following option: **Off, Pulse, Morph, Breathing, Spectrum, Reactive, Single Color Rain Drops, Rainbow Rain Drops, Arrows, Fireworks, Single Color Wave, Rainbow Wave, Scanner, X-Ray**.

Configuring Dial knob and Rocker switch functions


AW920K keyboard has configurable dial knob and rocker switches. You can change the functions of these switches in AWCC. The default functions of the dial knob and rocker switches are:

- Dial knob: System volume control and mute/unmute
- Rocker switch: Multimedia (previous track, next track, play and pause)

Configuring dial knob and rocker switch function in AWCC 5.5



Configuring dial knob and rocker switch function in AWCC 6.0

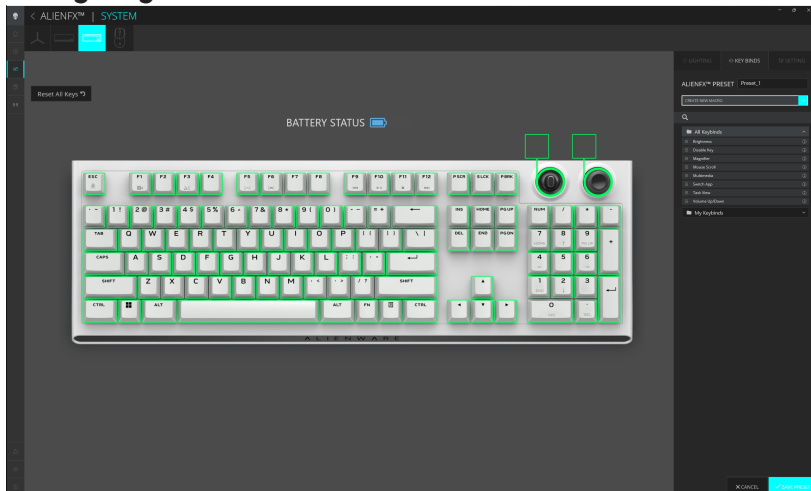


1. Click **FX** menu, select **Settings** tab, and then choose the AW920K keyboard device.
2. Click **Macros** by dragging from the **All Macros** list and dropping your selection to the image of the **Dial or Rocker** switch of the keyboard. The macros for the dial knob and rocker switch cannot be assigned to any other keys on the keyboard.
3. Assign the macro or keybind of the dial knob and/or rocker switch by dragging the macro or keybind from the list and dropping it on either the dial knob or rocker switch on the keyboard image.

 **NOTE: The macros or keybinds of the dial knob and rocker switch cannot be assigned to any other keys on the keyboard**


4. You can configure the dial knob or the rocker switch to one of the following functions:
 - **Brightness:** Adjust brightness of the keyboard
 - **Magnifier:** Zoom-in
 - **Mouse Scroll:** Vertical scroll on the window
 - **Multimedia:** Previous track, Next track, Play/Pause
 - **Switch App:** Switch between apps
 - **Task View:** Switch between tasks
 - **Volume:** System volume increase or decrease, mute/unmute

Updating firmware and restoring factory defaults

Updating firmware and restoring factory defaults in AWCC 5.5

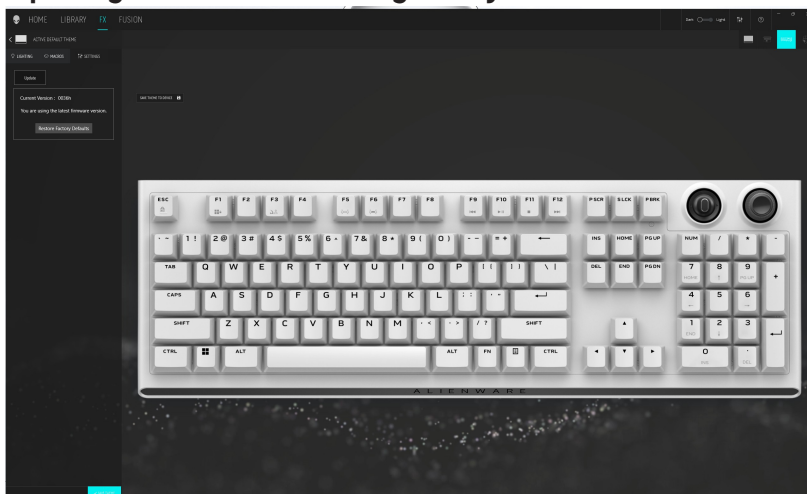

Updating firmware and restoring factory defaults in AWCC 6.0

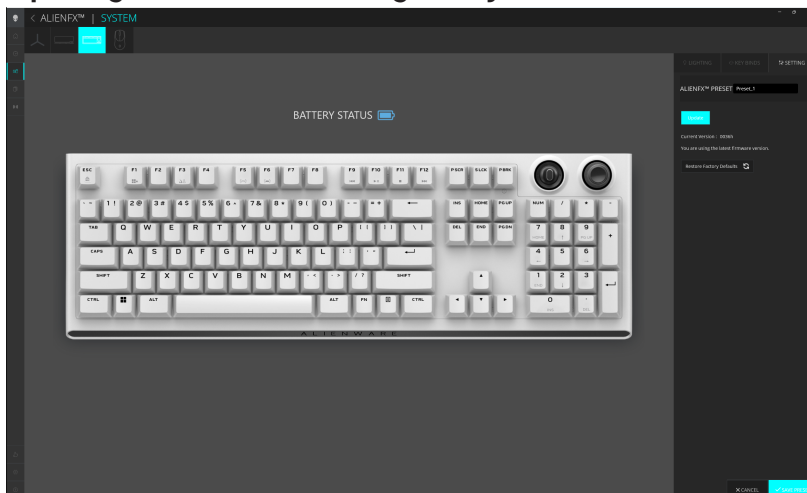

1. Click **FX** menu, select **Settings** tab, and then choose the AW920K keyboard device.
2. Click **Update** to view the firmware version and check if any new firmware is available. You can connect the dongle to the USB port and the keyboard with the USB cable to upgrade your device firmware. Follow the on-screen instructions to upgrade the device firmware.


3. Click **Restore Factory Defaults** button to reset the device to the manufacturing state.



NOTE: Reset Factory Defaults feature resets all the keyboard settings and configurations to the factory defaults, and then AWCC applies the existing Lighting and Macro settings to the keyboard when it is connected to the system.

Additional Features in AWCC 6.3 and Later version

Keybind Creation

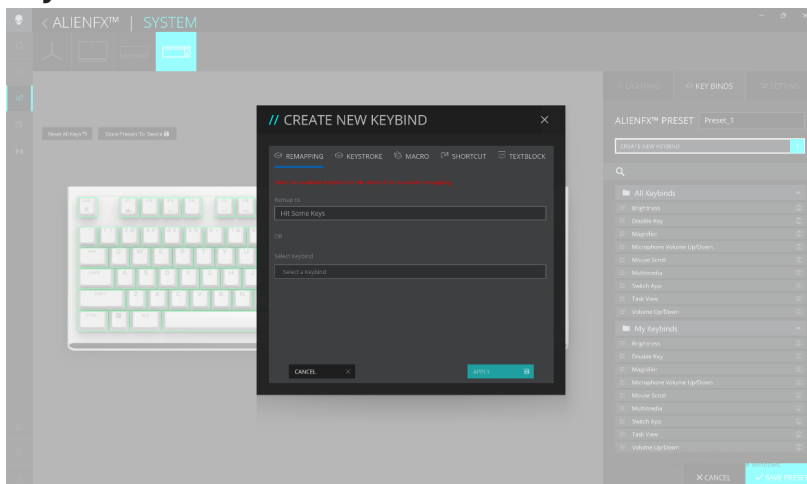


1. Click **AlienFX** icon.
2. Under **ALIENFX PRESET** in **SYSTEM**, select **KEY BINDS** from the top-right menu bar.
3. Click on the **CREATE NEW MACRO** or **Select any key on AWCC** to create a new keybind of the following types and map the keybind to any key except the Profile key (P-key):
 - a. **REMAPPING** – Button Remapping can be done by selecting any key on the keyboard in AWCC. Remapping cannot be done by using **Create new Macro Option**.
 - b. **KEYSTROKE** – select a key stroke by pressing a key on the keyboard.
 - c. **MACRO** – record a series of key strokes.

 **NOTE: KEYSTROKE and MACRO keybinds can repeat the key stroke once, repeat by toggling the key stroke, repeat the keystroke while the key is pressed or to repeat the key stroke for several times**

 - d. **SHORTCUT** – launch a program file, launch a folder, a computer or an internet address.
 - e. **TEXTBLOCK** – record a block of text.
4. User may click on the **RESET ALL KEYS** button to clear all the keybind assignment.

Save Preset

Alienware Tri-Mode Wireless Gaming Keyboard - AW920K allows the user to save the themes/presets (lighting, macros) created in AWCC, to the device onboard memory profiles, then the profiles can be switched using Fn+F3 key in the device.

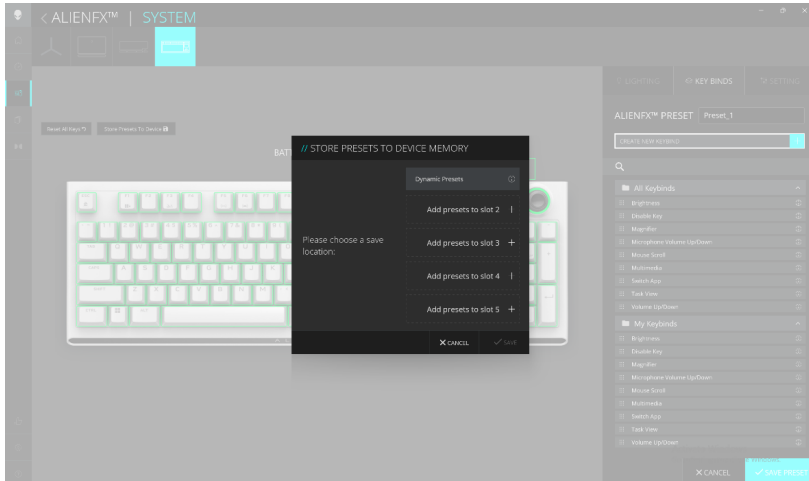

1. Click **AlienFX** icon.
2. Under **ALIENFX PRESET** in **SYSTEM**, select **LIGHTING** from the top-right menu bar.
3. Select **Effect** from the drop-down list for **STATIC (ALWAYS ON)** or **ON KEY PRESS** modes.
4. For **STATIC (ALWAYS ON)**, select the section of the keys or all sections that you want to apply the animation above the keyboard image.
5. From the menu of supported animations, select one of the following:
Off, Color, Pulse, Morph, Breathing, Spectrum, Single Color Wave, Rainbow Wave, Scanner, Static Default Blue
6. All these applied lightings can be stored in specific profile by clicking **Save Preset to Device** button .
7. Same steps will be repeated to store in other available profiles .

Disabling the modified keys temporarily

Query

Working behavior of modified keys

Solution

When a key is programmed with macro, it continues to send macro commands during normal usage.

Disabling the modified keys

Press FN + any key (except Function keys).

Example:

Q key was programmed to "ABCD" and in order for Q key to output "Q", press FN + Q.

Using modified keys

Password entry for log in.

Specifications

General

Model number	AW920K
Connection type	Tri-Mode Technology (USB, Wireless 2.4 GHz, and Bluetooth 5.1)
Supported operating systems (2.4 GHz)	Microsoft Windows 10 – RS3 and higher.
Supported operating systems (Bluetooth)	Microsoft Windows 10 – RS3 and higher.

Electrical

Operating voltage	5 V
Charging current	Maximum up to 3 A

Physical characteristics

Keyboard weight	1068 g (± 15 g)
Keyboard dimensions	451 mm (L) x 148 mm (W) x 40 mm (H) (± 0.50 mm)
Cable weight	52.30 g (± 5 g)
Dongle weight	2 g (± 1 g)
Dongle Extender weight	15 g (± 1 g)

Environmental

Operating temperature	0°C to 40°C (32°F to 104°F)
Storage temperature	-40°C to 65°C (-40°F to 149°F)
Operating humidity	90% maximum relative humidity, non-condensing
Storage humidity	95% maximum relative humidity, non-condensing

Troubleshooting

Problems

Possible solution

Keyboard is not functioning

- Disconnect the keyboard and connect it back to the USB port on your computer.
- Connect the keyboard to another USB port.
- Restart the computer.

Keyboard lighting is off

- Ensure that the light is not dimmed off, press FN+F6 to light up the keyboard.
- Disconnect the keyboard and connect it back in to the USB port on your computer.
- Connect the keyboard to another USB port.
- Restart the computer.
- Adjust keyboard brightness by **Alienware Command Center (AWCC)**.

For more information about the AWCC features

- Open the **Alienware Command Center**.
- Click the Help  icon. The **Alienware Command Center** Online Help is displayed.
- Click the Contents tab.
- From the Contents tab, click the required topic to find more details in **Alienware Command Center** features.

The selected configuration is not working in Alienware Command Center.

 
- Ensure that the Alienware Command Center is running on your computer.
- Open the Alienware Command Center and ensure that the configuration of your gaming keyboard is set properly and saved.

Charging power requirement

 **NOTE:** The information in this section is applicable only to the European Union (EU) countries.

Charging power requirement

The power delivered by the charger must be between minimum 2.9 W required by the radio equipment, and maximum 7.5 W in order to achieve the maximum charging speed.



Изискване за мощност на зареждане:

Мощността, осигурявана от зарядното устройство, трябва да е между минимум 2.9 W, изисквана от радиооборудването, и максимум 7.5 W, за да се постигне максимална скорост на зареждане.

Požadavek na nabíjecí výkon:

Aby bylo dosaženo maximální rychlosti nabíjení, musí být výkon dodávaný nabíječkou mezi minimem 2.9 W požadovaným rádiovým zařízením a maximem 7.5 W.

Strømkrav til opladning:

Den effekt, der leveres af opladeren, skal være mellem de minimale 2.9W, der kræves af radioudstyret, og maksimaleffekten på 7.5W for at opnå den maksimale opladningshastighed.

Charging power requirement:

The power delivered by the charger must be between minimum 2.9 W required by the radio equipment, and maximum 7.5 W in order to achieve the maximum charging speed.

Laadimisvõimsuse nõue:

maksimaalse laadimiskiiruse saavutamiseks peab laadija tarnitav võimsus jääma raadioseadmete nõutava minimaalse võimsuse 2.9 W ja maksimaalse võimsuse 7.5 W vahele.

Lataustehovaatimus:

Laturin tuottaman tehon on oltava radiolaitteen vaatiman minimin 2.9 W ja maksimin 7.5 W välillä maksimilatausnopeuden saavuttamiseksi.

Puissance requise pour le chargement :

L'alimentation fournie par le chargeur doit être comprise entre la puissance minimale requise par l'équipement radio (2.9 W) et la puissance maximale autorisée (7.5 W) afin d'atteindre la vitesse maximale de chargement.

Ladeanforderungen:

Die vom Ladegerät bereitgestellte Leistung muss zwischen mindestens 2.9 W für die Funkgeräte und maximal 7.5 W liegen, um die maximale Ladegeschwindigkeit zu erreichen.

Απαίτηση ισχύος φόρτισης:

Η ισχύς που παρέχει ο φορτιστής πρέπει να κυμαίνεται μεταξύ των ελάχιστων 2.9 W που απαιτούνται από τον ραδιοεξοπλισμού και των μέγιστων 7.5 W, προκειμένου να επιτευχθεί η μέγιστη ταχύτητα φόρτισης.

Töltési teljesítményigény:

A maximális töltési sebesség eléréséhez a töltő által leadott teljesítménynek a rádióberendezés által megkövetelt minimális 2.9 W és a maximális 7.5 W között kell lennie.

Requisiti di alimentazione per la ricarica:

L'alimentazione fornita dal caricabatterie deve essere compresa tra i 2.9 W minimi richiesti dall'apparecchiatura radio e i 7.5 W massimi, al fine di raggiungere la velocità di ricarica massima.

Uzlādes jaudas prasība.

Lādētāja nodrošinātajai jaudai jābūt no min. 2.9 W, kas nepieciešama radio aprīkojumam, un maks. 7.5 W, lai sasniegtu maksimālo uzlādes ātrumu.

Ķkrovimo galios reikalavimai.

Kad būtu pasiektas didžiausias ģkrovimo greitis, ģkroviklio galia pagal radijo ģrangos reikalavimus turi būti ne mažesnė kaip 2.9 W ir ne didesnė kaip 7.5 W.

Rekwiżit dwar il-potenza tal-iċċarġjar:

Il-potenza pprovduta miċ-ċarġer trid tkun bejn il-minimu ta' 2.9 W meħtieġ mit-tagħmir tar-radju tiegħek, u l-massimu ta' 7.5 W biex tinkiseb il-veloċità massima tal-iċċarġjar.

Vereiste oplaadstroom:

De stroom die door de oplader wordt geleverd, moet tussen minimaal 2.9 W, vereist door de radioapparatuur, en maximaal 7.5 W zijn om de maximale oplaadsnelheid te bereiken.

Wymaganie dotyczące zasilania:

Zasilanie dostarczane przez ładowarkę musi znajdować się w zakresie od wartości minimalnej 2.9 W wymaganej przez urządzenie radiowe po wartość maksymalną 7.5 W zapewniającą ładowanie z maksymalną szybkością.

Requisito de potência de carregamento:

A potência fornecida pelo carregador deve situar-se entre o mínimo de 2.9 W exigido pelo equipamento de rádio e o máximo de 7.5 W, a fim de atingir a velocidade máxima de carregamento.

Cerință de alimentare pentru încărcare:

Alimentarea furnizată de încărcător trebuie să fie între minimum 2.9 W, valoare impusă de echipamentul radio, și maximum 7.5 W pentru a obține viteza maximă de încărcare.

Požiadavky na napájanie:

Na dosiahnutie maximálnej rýchlosti nabíjania musí byť výkon dodávaný nabíjačkou medzi minimom 2.9 W požadovaným rádiovým zariadením a maximom 7.5 W.

Zahteve glede moči napajanja:

Za najhitrejšie polnjenje mora napajalnik dovajati moč med najmanj 2.9 W (kar zahteva radijska oprema) in največ 7.5 W.

Requisito de carga:

La potencia suministrada a través del cargador debe de ser de entre 2.9 W y 7.5 W para obtener la velocidad de carga máxima en equipos de radio.

Strömförsörjningskrav för laddning:

Den ström som levereras av laddaren måste vara mellan minst 2.9 W och högst 7.5 W enligt radioutrustningens krav för att uppnå maximal laddningshastighet.

Требования к мощности для зарядки:

Зарядное устройство должно подавать мощность в диапазоне от 2.9 Вт, согласно минимальному требованию для радиооборудования, до 7.5 Вт для достижения максимальной скорости зарядки.

Statutory information

Warranty

Limited warranty and return policies

Alienware-branded products carry a two-year limited hardware warranty. If purchased together with a Dell computer, it will follow the computer warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [**www.dell.com/terms**](http://www.dell.com/terms). This document contains a binding arbitration clause.

For European, Middle Eastern, and African customers:

Alienware-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms. Dell may also provide an additional hardware warranty—full details of the Dell end user contract and warranty terms can be found by going to [**www.dell.com**](http://www.dell.com), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link for the end user terms or the "support" link for the warranty terms.

For non-U.S. customers:

Alienware-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty—full details of Dell's warranty terms can be found by going to [**www.dell.com/terms**](http://www.dell.com/terms), selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link or the "support" link for the warranty terms.