



**A** CPU Cooler

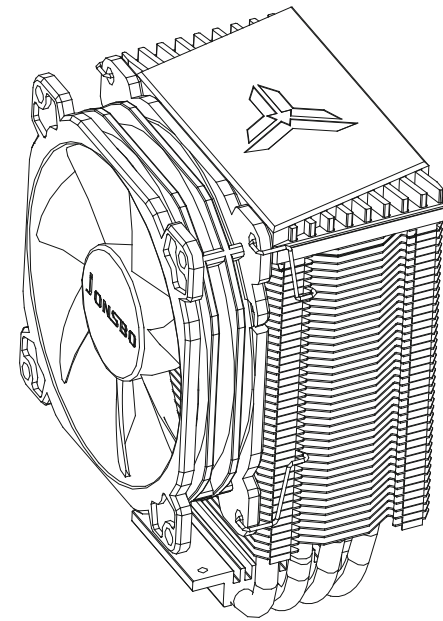

# CR-1400

## User's Manual


**B** Back Plate

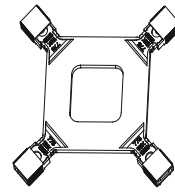


**C** Bracket Screw




**D** Intel Bracket

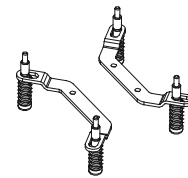


**E** AMD Bracket

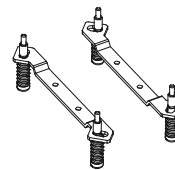

**F** Thermal Grease




**Step1**

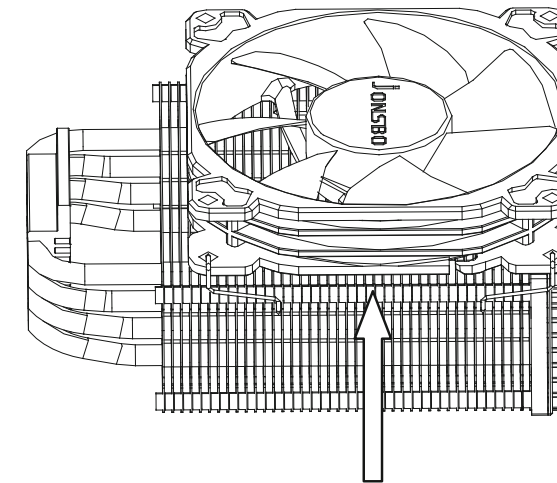

**EN** Please remove the fan before installing radiator by opening those 2 buckles pointed by arrow.

**CN** 安装散热器前先移除风扇，用手搬开箭头指示的2个卡扣就可以取下风扇。


**Step2**

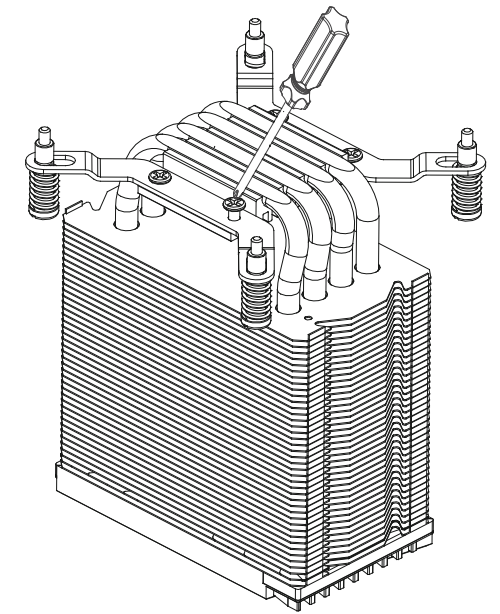


**EN** Install the bracket mount on the cooler base. Fasten the bracket mount with screws.

**CN** 将支架安装到散热器底座，并用螺丝将其锁紧。

**Step3**

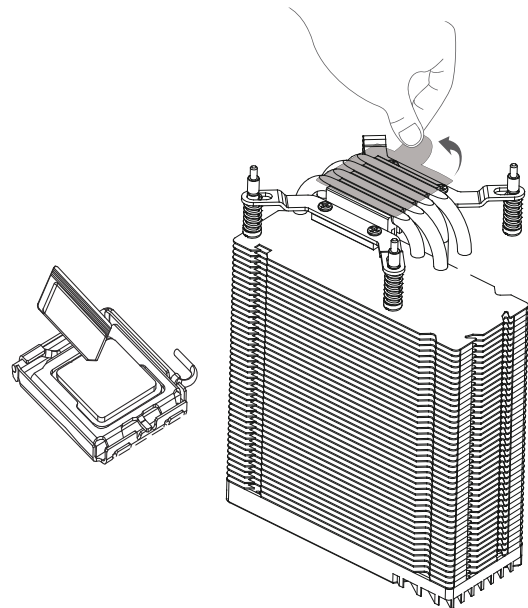


**Step4**

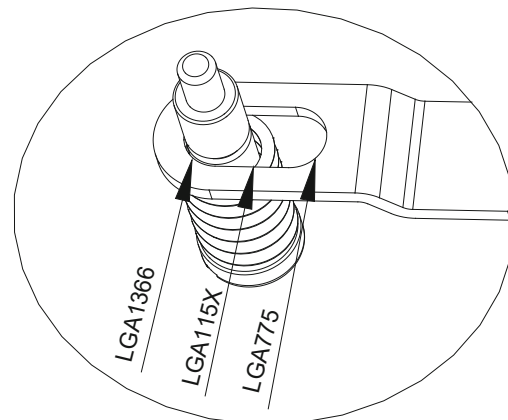

**EN** Move the screw on the bracket to the corresponding position according to the main board type. (As shown in the above figure)

**CN** 根据主板型号将支架上的螺杆移到对应位置。(如上图所示)


**Step5**

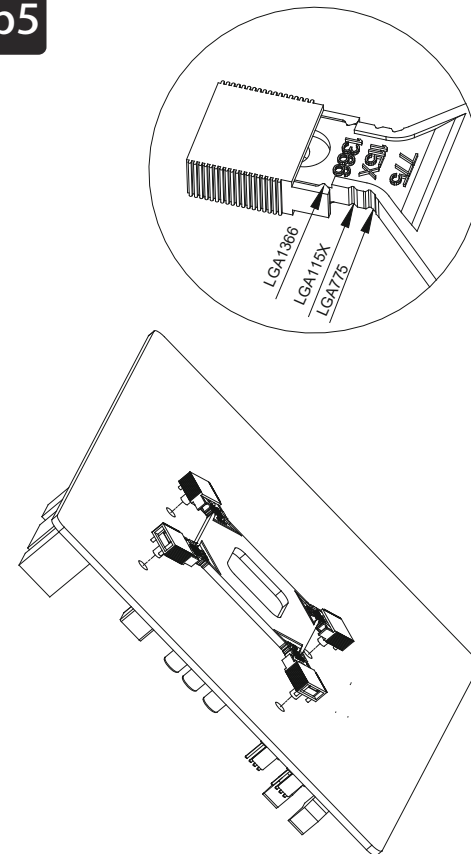

**EN** The backplane positioning slider is moved to the desired position and loaded into the main board. (As shown in the above figure)

**CN** 将背板定位滑块移至所需位置后，装入主板。(如上图所示)


**Step6**

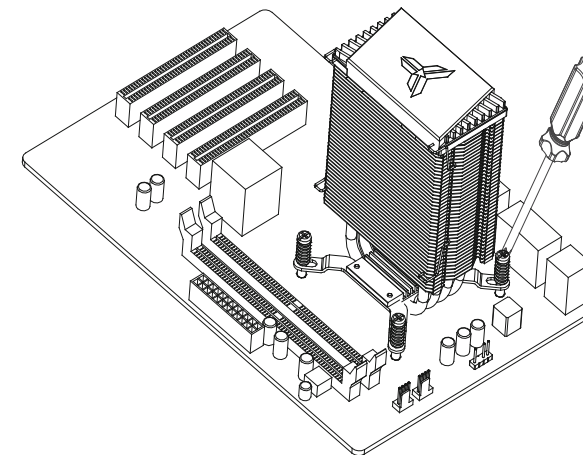

**EN** Place the radiator on the CPU while aligning the support screw to the backplane nut and tightening (Pictured above)

**CN** 将散热器置于CPU上，同时将支架螺杆对准背板螺母并拧紧。(如上图)


**Step7**

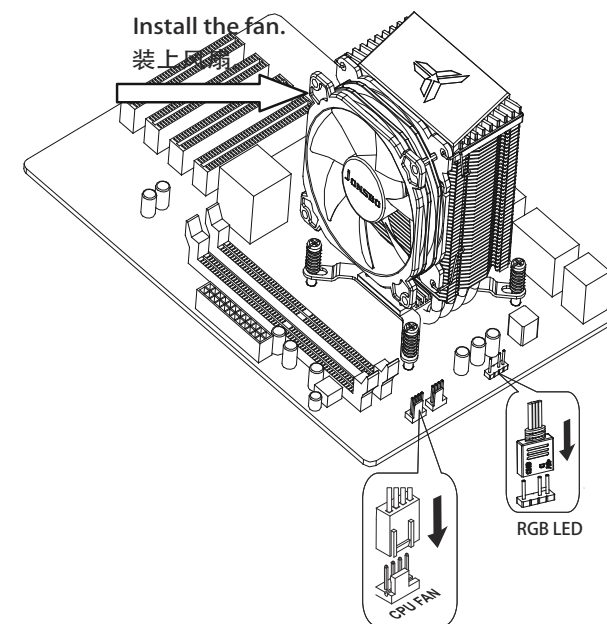

**EN** Connect fan conductor and RGB LED conductor to motherboard.(as shown above)

**CN** 将风扇导线和RGB LED导线与主板连接。(如上图)

Step1

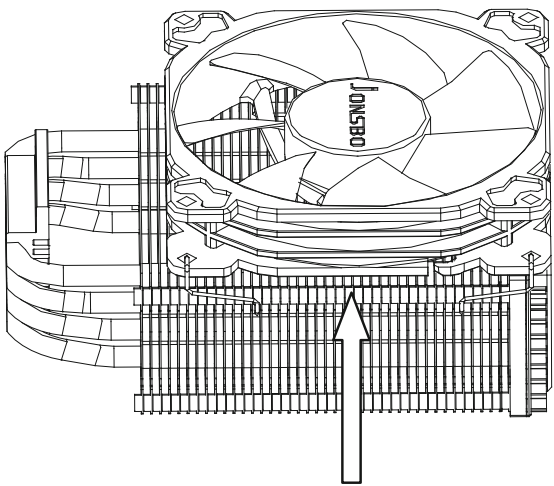


- EN

Please remove the fan before installing radiator by opening those 2 buckles pointed by arrow.
- CN

安装散热器前先移除风扇，用手搬开箭头指示的2个卡扣就可以取下风扇。

Step2

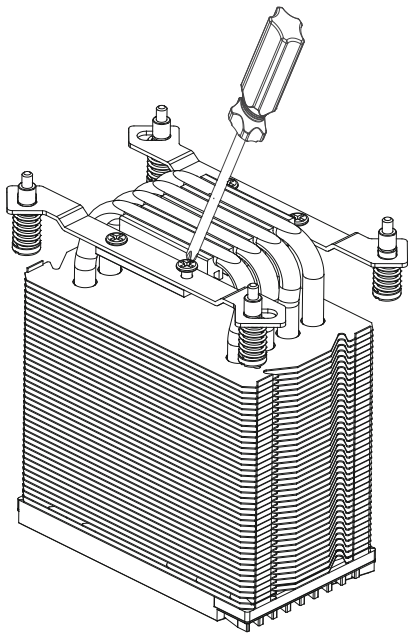


- EN

Install the bracket mount on the cooler base. Fasten the bracket mount with screws.
- CN

将支架安装到散热器底座，并用螺丝将其锁紧。

Step3

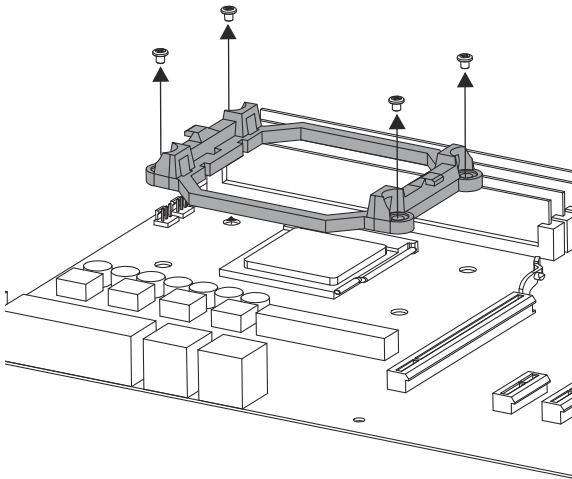


- EN

Please remove the original heat sink bracket on the AMD motherboard. (Pictured above)
- CN

请将AMD主板上的原厂散热支架移除。（如上图）

Step4

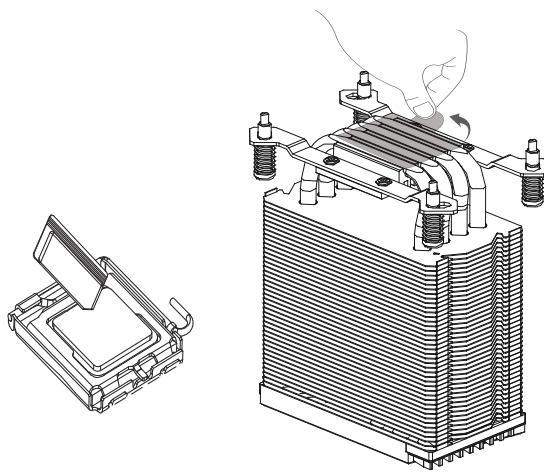


- EN

Evenly spread the heat sink paste on the surface of the CPU and remove the bottom of the radiator.
- CN

将散热膏均匀涂抹在CPU表面上，并取下散热器底部的保护膜。

Step5

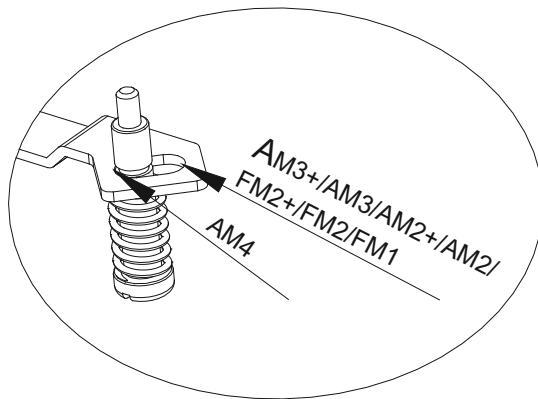


- EN

Move the screw on the bracket to the corresponding position according to the main board type. (As shown in the above figure)
- CN

根据主板型号将支架上的螺杆移到对应位置。（如上图所示）

Step6

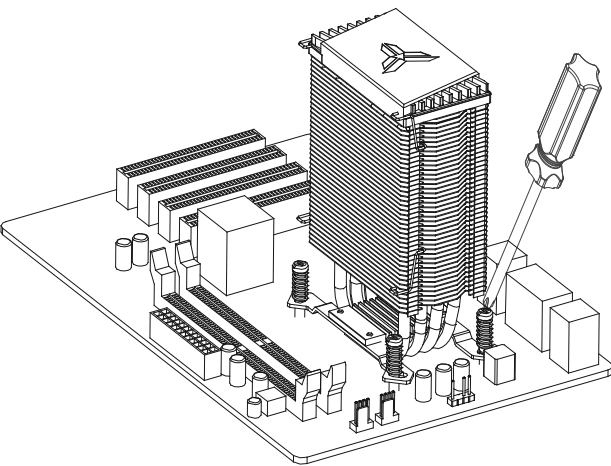


- EN

Place the radiator on the CPU and screw the bracket screw to the base of the original cooling rack (Pictured above)
- CN

将散热器置于CPU上，同时将支架螺杆对准主板原装散热架底座孔位并拧紧。（如上图）

Step7

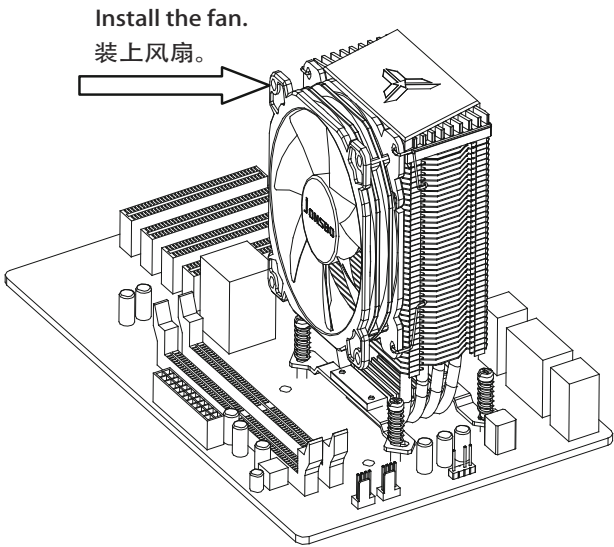


- EN

Install the fan.
- CN

装上风扇。

Step8

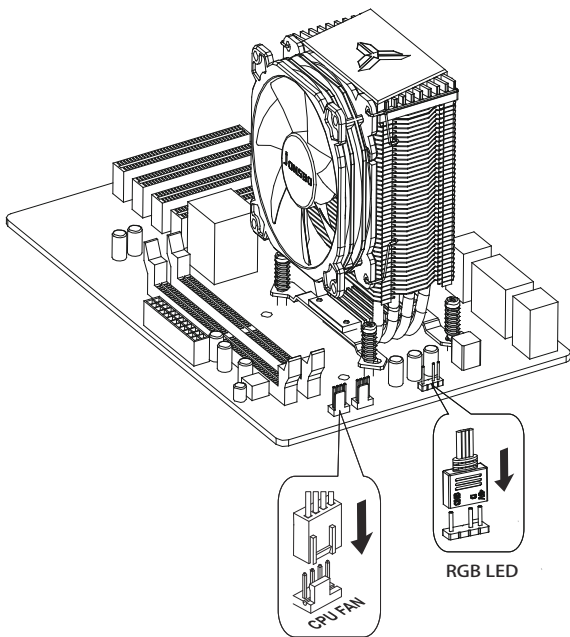

- EN

Connect fan conductor and RGB LED conductor to motherboard.(as shown above)
- CN

将风扇导线和RGB LED导线与主板连接。（如上图）

CR-1400